
PORCHER®

DIAMETRIQUE ACCESSORIES

TISSUE HOLDER
18" TOWEL BAR
24" TOWEL BAR

Installation Instructions

5128.230
5128.180
5128.240

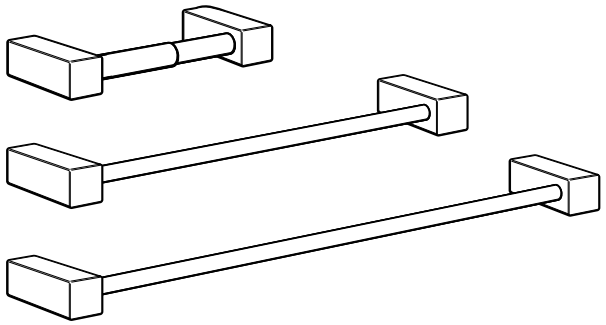

Thank you for selecting Porcher Products.

To ensure that your installation proceeds smoothly–please read these instructions carefully before you begin.


Certified to comply with ANSI A112.18.1

M968817


Recommended Tools



Tape Measure

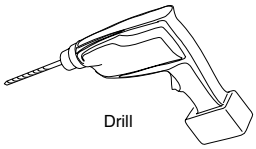

Drill




#2 Phillips Screwdriver



Level

1 TISSUE HOLDER MOUNTING & INSTALLATION

- The TISSUE HOLDER (1) works best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the TISSUE HOLDER (1) is to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (2) must be used.
- Determine desired height and location (optional) and mark a center line. Use a level to align the FULL SIZE TEMPLATE (7) **FIGURE 1** and mark the four spots for the ANCHORS (3). If MOUNTING BRACKET (4) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- ***For installations on drywall or tiled walls,*** If ANCHORS (3) and SCREWS (2) are used for securing MOUNTING BRACKET (4), drill four 1/4" [6mm] dia. holes a minimum of 1-3/4" [35mm] deep. Insert the four ANCHORS (4) flush with face of the finished wall. Secure MOUNTING BRACKET (4) to wall with SCREWS (2) with a #2 Phillips screwdriver.
- Place the TISSUE HOLDER (1) onto the MOUNTING BRACKETS (4) so that the BODY (7) is flush against the finished wall. Check alignment of accessory. Tighten the SET SCREWS (5) with HEX WRENCH (6) supplied to secure the TISSUE HOLDER (1) to the MOUNTING BRACKET (4) and tighten fully to complete installation.

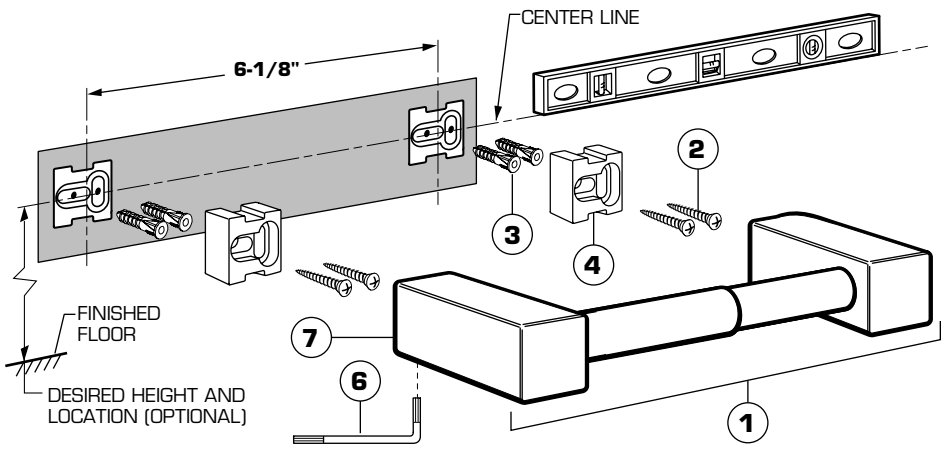


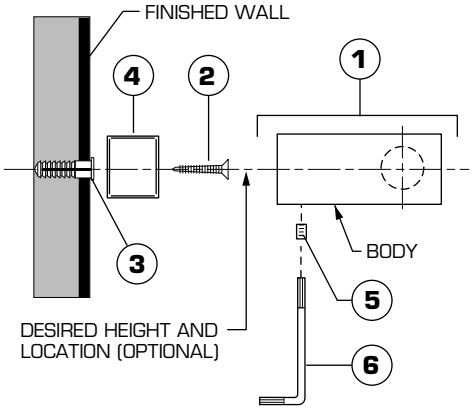


FIGURE 1

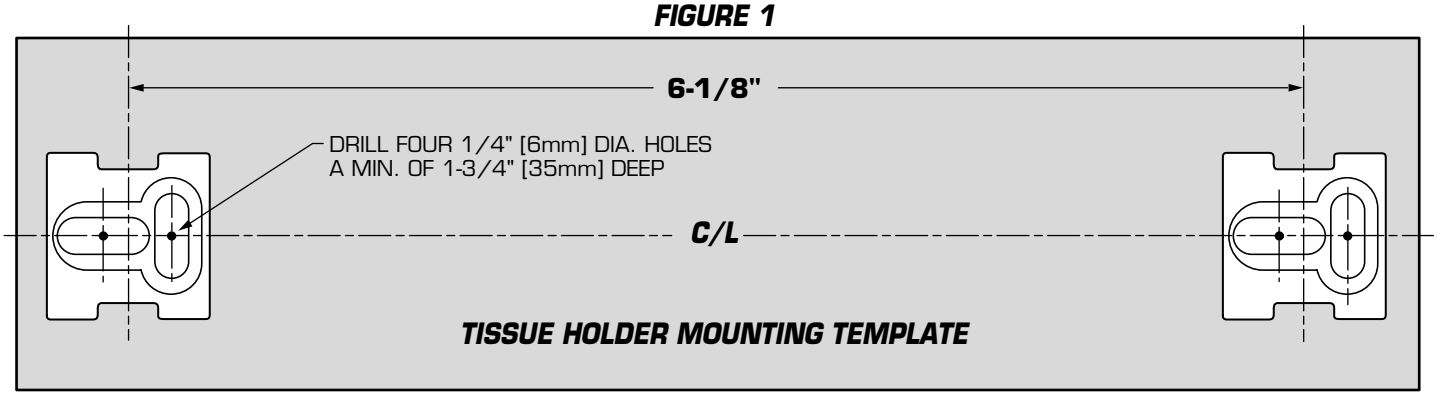

TISSUE HOLDER MOUNTING TEMPLATE

1 18" [457mm] AND 24" [610mm] TOWEL BARS, MOUNTING & INSTALLATION

- The TOWEL BARS (1, 2) work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the TOWEL BARS (1, 2) are to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (4) must be used.
- **Figure 1:** Determine desired height and location (optional) and mark a horizontal center line on mounting surface using a level. At desired location along horizontal center line mark a vertical center line for the right end MOUNTING BRACKET (5). Measure 18" or 24" left and mark a vertical center line. Use the template **(Figure 3)** and align the vertical and horizontal center lines on the template with the center lines marked on the mounting surface. Mark the location of the two anchor holes to be drilled for both right and left MOUNTING BRACKETS (5). If MOUNTING BRACKET (5) is secured to a stud or cross brace drill small pilot holes for SCREWS (4).
- ***For installations on drywall or tiled walls,*** If ANCHORS (3) and SCREWS (2) are used for securing MOUNTING BRACKETS (5), drill four 1/4" [6mm] dia. holes a minimum of 1-3/4" [35mm] deep as marked. Insert the four ANCHORS (3) flush with face of the finished wall. Secure MOUNTING BRACKETS (5) to wall with SCREWS (4) with a #2 Phillips screwdriver.
- **Figure 2:** Place the TOWEL BAR (1, 2) onto the MOUNTING BRACKETS (5) so that the BODY (6) is flush against the finished wall. Check alignment of accessory. Tighten the SET SCREWS (7) with HEX WRENCH (8) supplied to secure the TOWEL BAR (1, 2) to the MOUNTING BRACKETS (5) and tighten fully to complete installation.

FIGURE 1

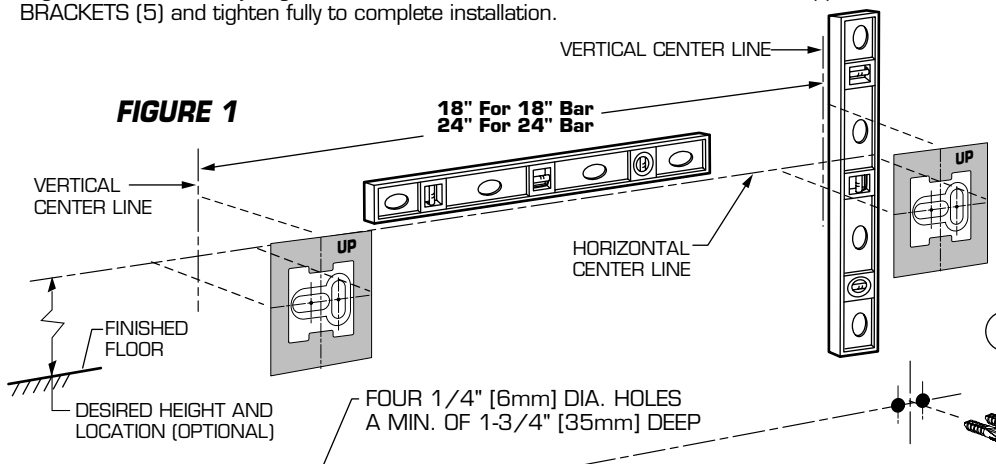
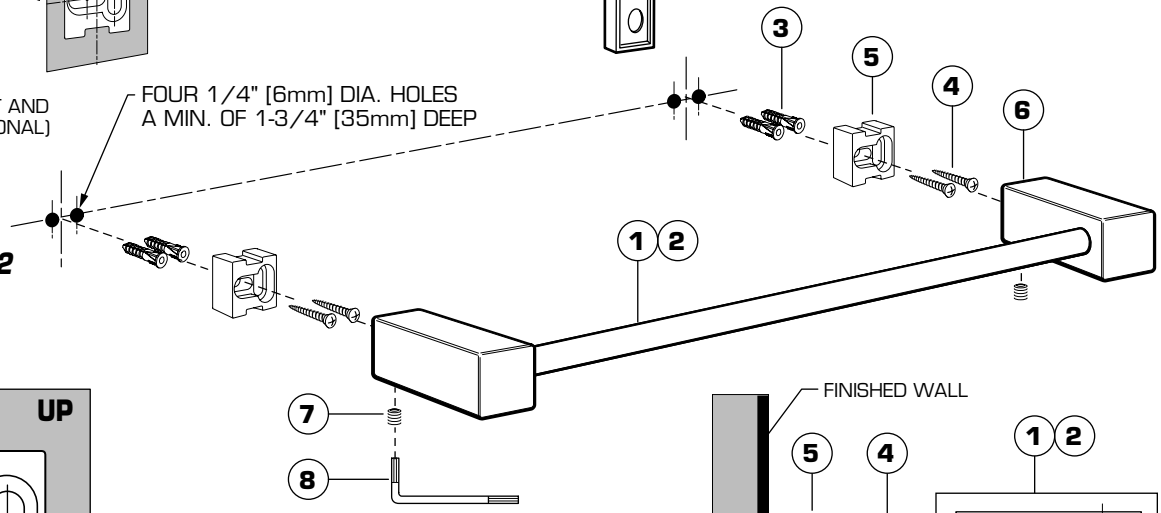


FIGURE 2




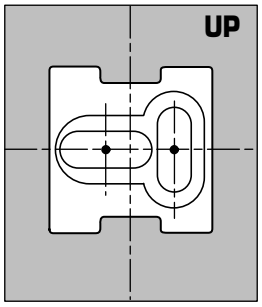


FIGURE 3

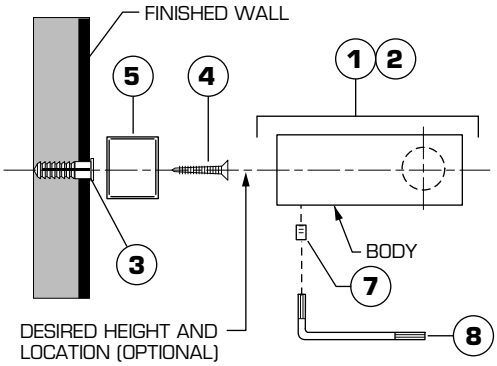

2 CARE INSTRUCTIONS

- To keep your new accessory looking new, please follow these simple care instructions:
  - **DO:**
    - Simply rinse the accessory clean with clear water.
    - Dry the accessory with a soft cotton cloth.
  - **DO NOT:**
    - Do not use any abrasive cleaners, cloths, or paper towels.
    - Do not use any cleaning agents containing acids, polish abrasives, or harsh cleaners or soaps.
- Regular and routine cleaning will reduce the need for heavy cleaning and polishing. If heavy cleaning is required, the following procedures are recommended:
- Remove as much surface dirt and film using clear water and soft cotton cloth (as described).
  - Use any of the following to remove tough surface film and build-up:
  - Mild liquid detergents
  - Clear ammonia free liquid glass cleaners
  - Non-acidic, non-abrasive gentle liquid or fully dissolved powder cleansers mixed according to manufacturers directions.
  - Non-abrasive liquid polishers
- Once clean, rinse accessory again with clear water to thoroughly remove cleaner or polish and blot dry with a clean dry cloth.


Failure to follow these care instructions may damage the accessories finish.


PORCHER®

DIAMETRIQUE ACCESSORIES

MODEL NUMBERS

TISSUE HOLDER	***5128.230***
18" TOWEL BAR	***5128.180***
24" TOWEL BAR	***5128.240***

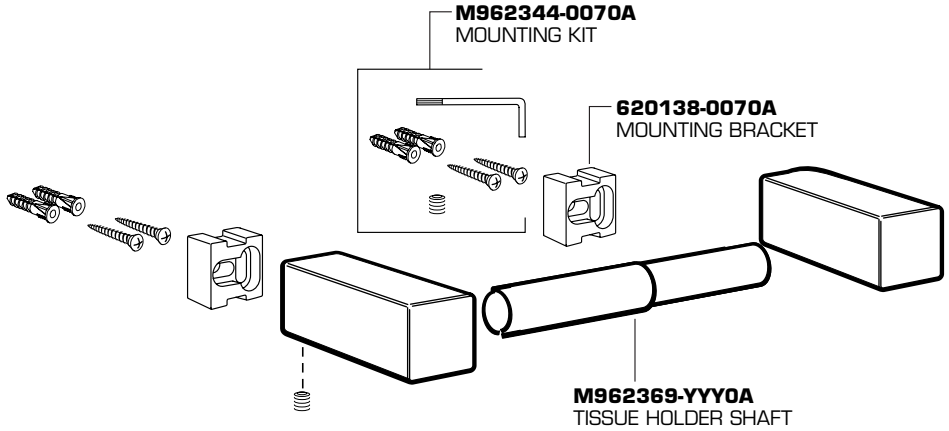

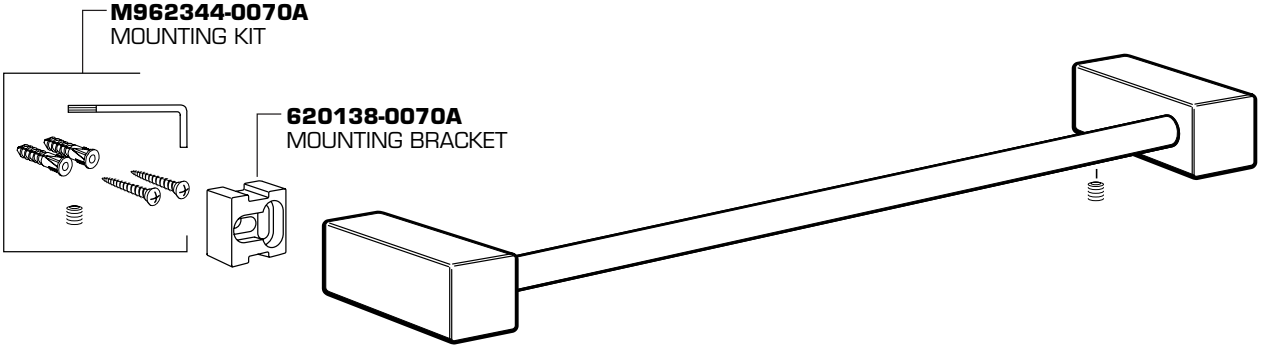

Replace the "YYY" with appropriate finish code

CHROME	002



HOTLINE FOR HELP
For toll-free information and answers to your questions, call:
1 (800) 359-3261
Weekdays 8:00 to 7:00 p.m. EST
IN CANADA 480-961-5353

Product names listed herein are trademarks of Porcher, Ltd.
©Porcher, Ltd.2004